

Product overview

- ⊙ Rated voltage: AC230V,AC110V,AC24V
- ⊙ Rated torque: **20N.m**
- ⊙ Running time: **about 15S**
- ⊙ Install below **15N.m** valves: 2-way, 3-way ball valve and butterfly valve
- ⊙ Wiring and feedback model: B3,BD3,B3S,BD3S,B3P,B3R (Customized)
- ⊙ Adopted high-performance Synchronous Motor
- ⊙ It can be used 20,000 times.*1
- ※ It is forbidden to use 2 or more actuators in parallel



Technical Data


Electrical data	Rated voltage	AC230V 50/60HZ	AC110V 50/60HZ	AC24V 50/60HZ	
	Rated voltage range	AC190-250V	AC90-130V	AC22-28V	
	Power consumption	13.2W@running0.0W@holding	15W@running0.0W@holding	10.8W@running0.0W@holding	
	Peak current	60mA@5ms	135mA@5ms	450mA@5ms	
	Fuse	1A	1A	2A	
	Functional data	Connecting cable	7*0.2mm ² cable, voltage withstand AC300V (Length 800mm)		
Rated torque		20N.m@rated voltage			
Angle of rotation		90±2°			
Max angle of rotation		360°			
Manual operation		※Matching hexagon wrench, using at no power			
Running time		About 15S (per 90°)			
Operating frequency		Not continuous operation operating cycle ≥1min			
Sound power level		Max50dB(A)			
Working conditions		Position indicator	Mechanical		
		Electricity safety level	I Type(ground protection)	I Type(ground protection)	III Type(safely low voltage)
	Inflaming retarding level	1.6mmHB/ UL94 test method			
	Enclosure	IP67 As Per En60529/GB4208-2008 (all directions) F type can add bracket or dehumidifying heater			
	Insulation resistance	100MΩ/1500VDC	100MΩ/1500VDC	100MΩ/500VDC	
	Withstand voltage	1500VAC@1Min	1500VAC@1Min	500VAC@1Min	
	Medium temperature	≤80°can install to actuator directly ※ >80° need to install heat radiation stand			
	Working environment	※Indoor or outdoor; if exposed to the rain or sunshine, need to install protective device for the actuator			
	Explosion-proof level	⚠ Not explosion proof products, do not use them in flammable and explosive environment			
	Ambient temp	-20℃— 60℃ (ABS)/-20℃— 80℃ (Casting aluminum)			
	Non-operation temp	≤-40℃ or ≥80℃			
	Ambient humidity	5-95%RH non-condensing			
	Shock resistance	≤300m/S ²			
	Vibration	※10 to 55 Hz, 1.5 mm double amplitude			
	Installation notes	360°any angle, need manual operation or allow for wiring space			
	Dimensions / weight	Maintenance	Free maintenance		
Certification		CE / MA / AL			
Dimensions (LXWXH)		See "Dimensions"			
Connection standard		ISO5211 F03、 F04、 F05			
Output axis specification		Female octagonal or male square			
Hole deepness		≤17mm(Female octagonal)/6.5mm(Male square)			
Weight		ABS material 0.78kg,Casting aluminum 0.98kg			

*1 Rated load 15Nm, temperature 25℃, testing switching time is 15s in factory environment where humidity is 50%, test results will be influenced by different load and working environment.


Dimension 【Canning material:ABS (Cable from bottom)】

unit: mm

Direct mount [female octagonal output shaft]

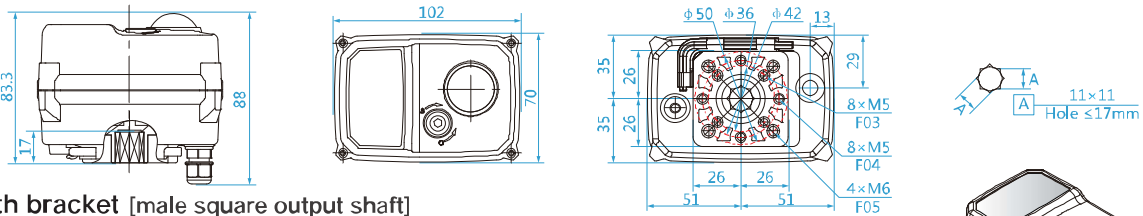


With bracket [male square output shaft]

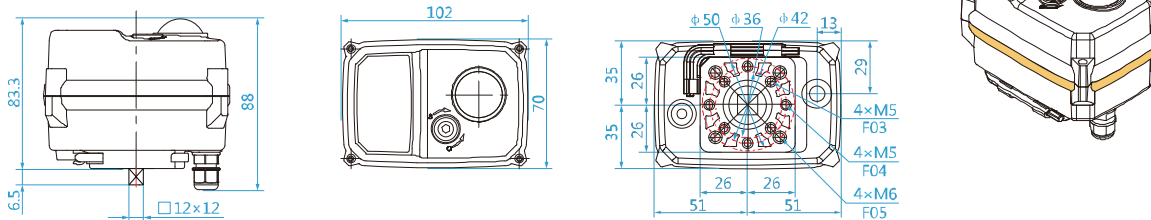


Dimension 【Canning material:ABS (Cable from side)】

unit: mm

Direct mount [female octagonal output shaft]

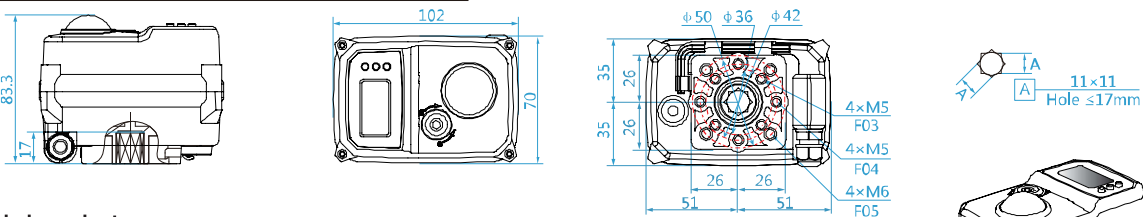


With bracket [male square output shaft]

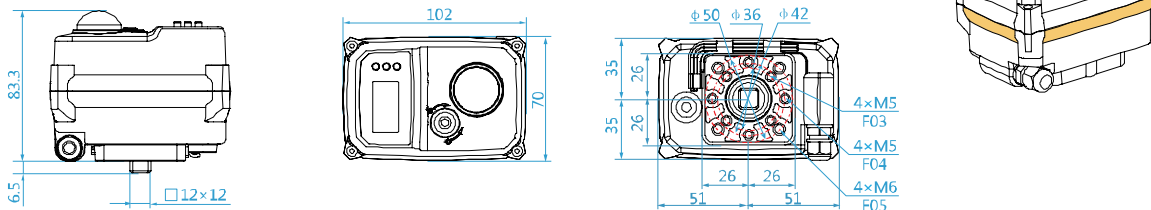


Dimension 【Canning material:Die-casting Aluminium】

unit: mm


Direct mount [female octagonal output shaft]

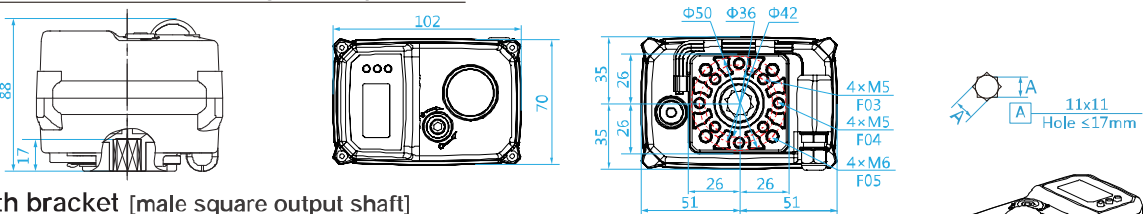

With bracket [male square output shaft]

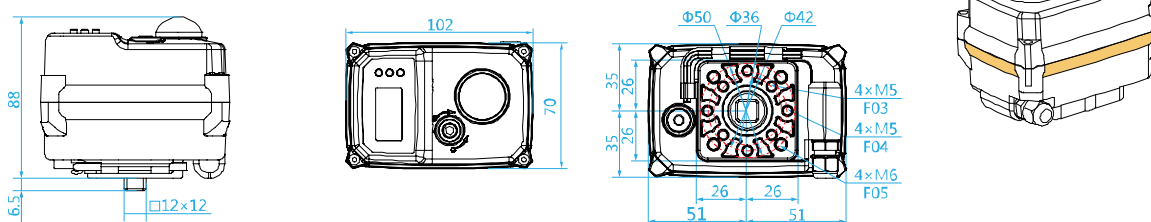


Main parts

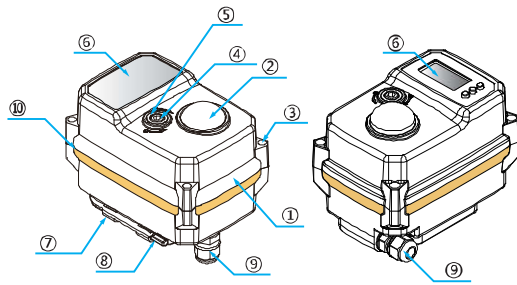

Parts	Material	Parts	Material
1	Actuator	6	Label
2	Indicator	7	Wrench fixed
3	Screw X 4	8	Hexagon wrench
4	Manual shaft	9	Waterproof cable connector
5	Oil seal	10	Lid seal
	Heatproof ABS or Casting aluminum		PVC
	Transparent AS		Heatproof_ABS
	304		Tool steel
	304		NI/Lon
	NBR		NBR

Wiring diagrams_1


B3S

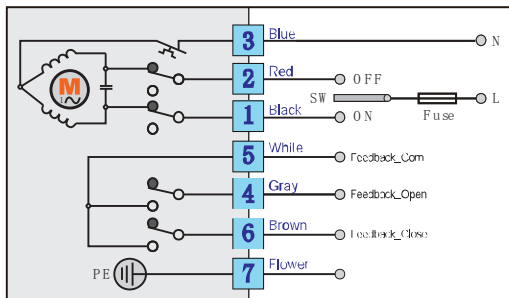

Control instructions:

- SW is connected with [2], the actuator will rotate clockwise ↻. When the valve is closed, [5] is connect with [6], giving signal of dosing.
- SW is connected with [1], the actuator will rotate anticlockwise ↻. When the valve is open, [5] is connect with [4] giving signal of opening.
- ※ Notice 1: [5] is not connected with [4] and [6] when the actuator is rotating.
- ※ Notice 2: The feedback signal is a little earlier than the actual position, so please do not cut power when you get the feedback signal.


B3R

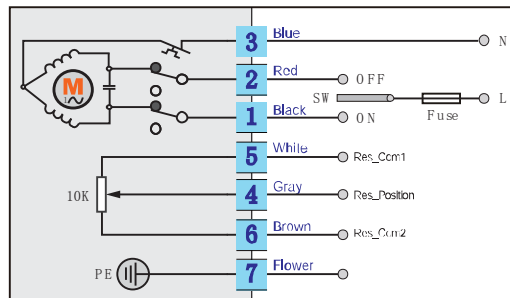

Control instructions:

- SW is connected with [2], the actuator will rotate clockwise ↻. The resistance value between [5] and [4] will decrease, the actuator will stop when the valve is closed.
- SW is connected with [1], the actuator will rotate anticlockwise ↻. The resistance value between [5] and [4] will increase, the actuator will stop when the valve is open.


BD3S

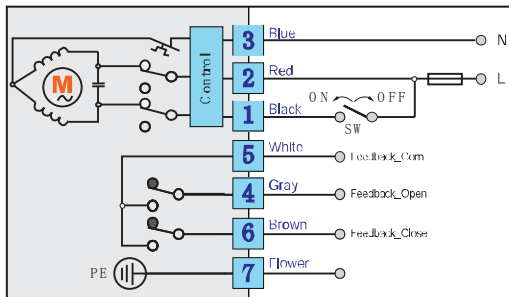

Control instructions:

- If SW is disconnected the actuator will drive valve close clockwise ↻. When the valve is closed completely, [5] is connected with [6], giving signal of closing.
- If SW is connected, the actuator will drive valve open anticlockwise ↻. When the valve is open completely, [5] is connected with [4], giving signal of opening.
- ※ Notice 1: [5] is not connected with [4] and [6] when the actuator is running.
- ※ Notice 2: The feedback signal is a little earlier than the actual position, so please do not cut power when you get the feedback signal.

B3P

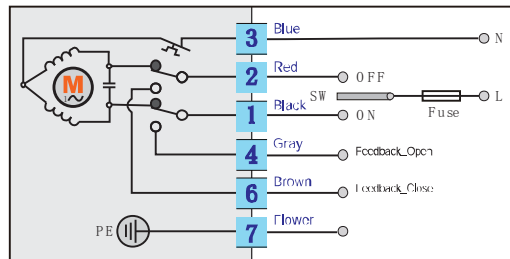


Control instructions:

- SW is connected with [2], the actuator will rotate clockwise ↻. When the valve is closed, [2] is connect with [6], giving signal of closing.
- SW is connected with [1], the actuator will rotate anticlockwise ↻. When the valve is open, [1] is connect with [4], giving signal of opening.
- ※ Notice 1: [2] is not connected with [6], [1] is not connected with [4] when the actuator is rotating.
- ※ Notice 2: The feedback signal is synchronous with valve position.


Wiring instructions:

1. Please refer to manual for more parameters.
2. SW switching capability: please refer to manual for more parameters.
3. Feedback signal contact load capacity: 0.1A/250VAC 0.5A/30VDC.
4. Please make sure actuator connect ground reliably.




Wiring notice


Error wiring

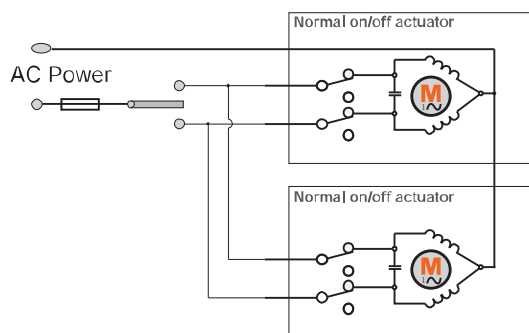

Right wiring

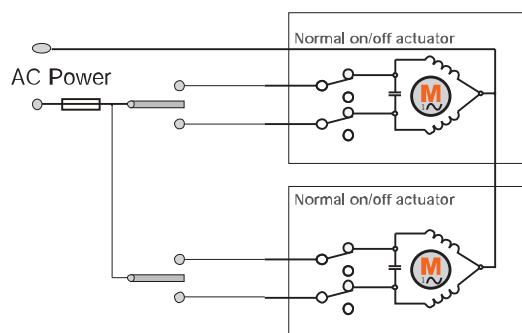

Mounting instructions

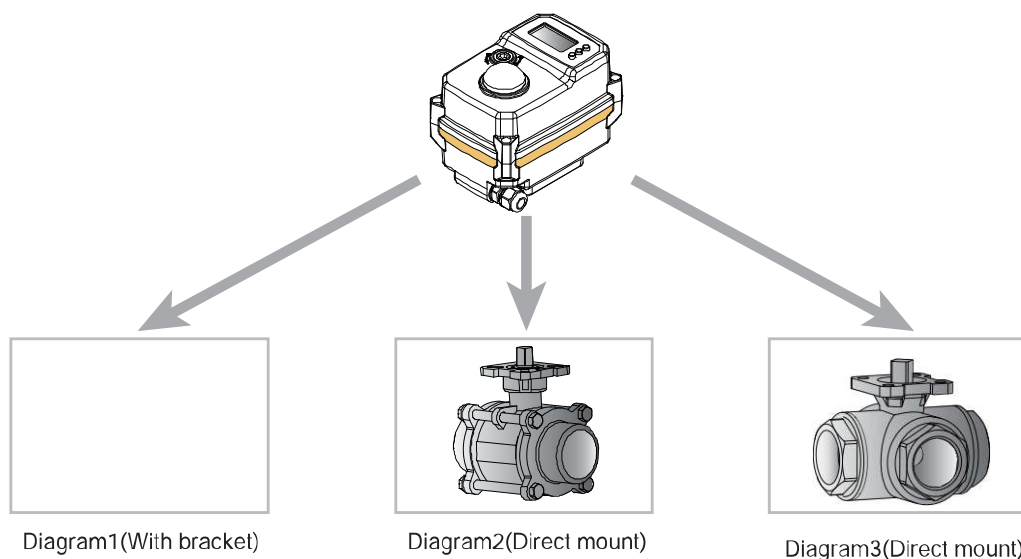

- Diagram1 UPVC plastic ball valve+bracket assembly
 Diagram2 3piece stainless steel ball valve assembly
 Diagram3 3piece stainless steel 3way ball valve assembly

Installed valve technical requirements

- 1. When installing ball valve, the max torque < 15N.m. If the ball valve is out of operation for a long time, and the torque value of first on or off is the max torque. Or you can choose ball valve with elastic sealing.
- 2. When installing butterfly valve, the max torque < 13N.m. Because the torque value will increased by 10-20% after installing.
- 3. When installing direct mount model valve, the hole deep ≤ 17mm. It requires cutting if the output shaft is longer than 17mm.
- 4. Pls pay attention to the following items if you install the bracket and coupling by yourself:
 - ※ The intensity of bracket should meet the using requirements: the bracket twisting extent ≤ 0.2mm in the process of on or off.
 - ※ The parallelism of bracket ≤ 0.5mm.
 - ※ When processing the shaft hole at both end of the coupling, it is necessary to ensure the accuracy and concentricity. The purpose is to make sure the mechanical hysteresis ≤ 10°, otherwise it will cause the actuator unable to work.
- 5. Screw should be installed spring washer、flat washer, and we suggest you daub some glue cement around the screw in case of screw loosening.
- 6. After installation, user should switch the valve on and off one time with handle device first. Modifying the valve after make sure it works well.

Adjusting valve location instructions

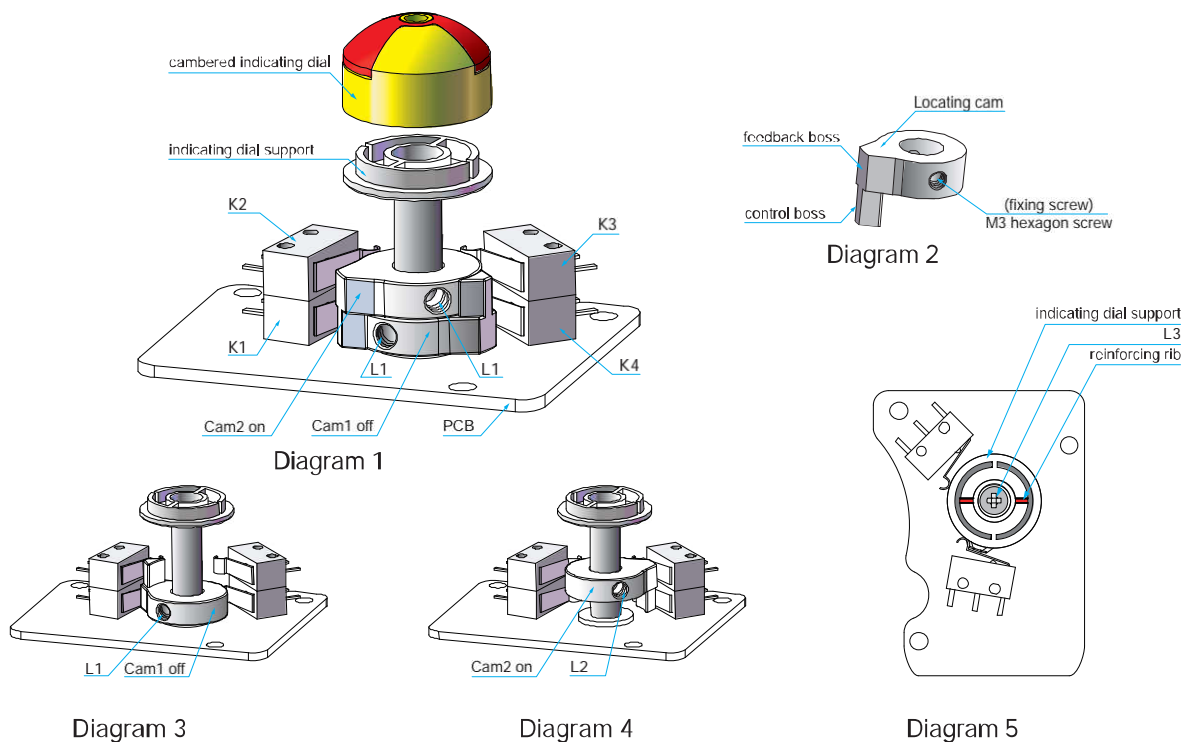


Diagram 1 locating mechanism structural schematic diagram
 Diagram 3 close adjustment schematic diagram
 Diagram 5 Indicating dial adjustment schematic diagram

Diagram 2 locating cams structural schematic diagram
 Diagram 4 open adjustment schematic diagram

Valve positon adjustment

- ※ Notice 1: The default is that rotating in clockwise direction means closing ,and rotating in anticlockwise direction means opening.
- ※ Notice 2: B3P does not have K2,K4 micro switch.

Micro-adjustment of electrical limit:

□1 Adjusting full close:

- △ Rotate the valve to full close position with handle.
 - ※ Since the valve has gone through "factory default setting", this step can be omitted if it the adjustment is slight.
- △ Detach cambered indicating dial, loosen fixing screw L3 of indicating dial support, turn reinforcing rib as shown in diagram 5, perpendicular to the flow direction of valve, then screw up L3 and buckle up cambered indicating dial.
 - ※ Caution: When screwing up L3, the torque ≤ 0.5 NM, otherwise it will damage locating driving gear.
- △ Loosen fixing screw L1 of cam 1, drive cam 1 to rotate clockwise and trigger micro switches K2, K1 to move in turn and make sound. When K1 moves and makes sound, stop adjustment. Then screw up fixing screw L1.

□2 Adjusting full open:

- △ Rotate the valve to full open position with handle:
- △ loosen fixing screw L2 of cam2, drive cam 2 to rotate anticlockwise and trigger micro switches K4, K3 to move in turn and make sound. When K3 moves and makes sound, stop adjustment. Then screw up fixing screw L2.

□3 Wiring:

After modifying, connect the circuit according to the wiring label on the box cover. After confirmation,you can do power test.

□4 Power test:

- △ mainly check the consistence of on and off between the actuator and the valve body. At the same time, please check whether the valve is full close or not. Special testing device is recommended.
- ※ In the process of adjustment, do not over tighten screws, otherwise it will damage screw threads or other parts.

Common failures and processing methods

	Fault phenomenon	Fault cause	Processing methods
□1	Actuator no action	△1 power not connected	Connect power
		△2 voltage below level or incorrect	Check whether voltage is within the normal range
		△3 overtemperature protection of motor	Check whether valve gets stuck or torque value is too big
		△4 terminal loose or poor contact	Check and correctly connect terminal
		△5 starting capacitance poor run	Contact the manufacturer to get repair
□2	No feedback signal	△1 line barrier of user acquisition signal	Connect user acquisition signal
		△2 microswitch damage	Change microswitch
□3	Actuator not fully closed	△1 use feedback signal to control actuator	Receive feedback signal doesn't mean actuator is fully closed, so don't cut power off
		△2 technical hysteresis increases due to abrasion between actuator and valve rod	1 Readjust valve-off position 2 Contact the manufacturer to get repair
□4	Actuator interior water ingress	△1 OD of incoming line cable non-standard	Contact the manufacturer to get repair
		△2 waterproof treatment of incoming line incomplete	
		△3 actuator lens wearout	
		△4 screws on connection cover/head cover /slide cover loose	

Working environment

- Indoor and outdoor are both optional.
- Not explosion proof products, ⚠ do not use them in flammable and explosive environment.
- You need to install protective device for the actuator if it is exposed to the rain or sunshine.
- Please pay attention to the ambient temp.
- When installing, you need to consider the reserved space for wiring and repairing.
- When power on, ⚠ it is not allowed to dismantle actuator and valve.
- When power on, ⚠ it is not allowed to do wiring.
- ✘ Absolutely no falling down the ground, which will hit the device and lead to improper operation.
- ✘ Absolutely no standing on the device, which will cause device malfunction or personal accident.
- ✘ It is forbidden to do wiring project in rainy day or when there is water splash.

Safety notice

- In order to use the device safely for a long term, please pre-read the manual carefully to ensure correct use.
- Notice item: Please understand the product specification and using method clearly to prevent personal safety danger or device damage.
- In order to indicate damage and danger, here we classify them as "warning ⚠" and "notice ✘".
- Both of contents are very important, which should be obeyed strictly.
- "Warning ⚠": It will cause death or serious injury if not obeyed.
- "Notice ✘": It will cause slight injury or device damage if not obeyed.
- Subject to technical changes.